


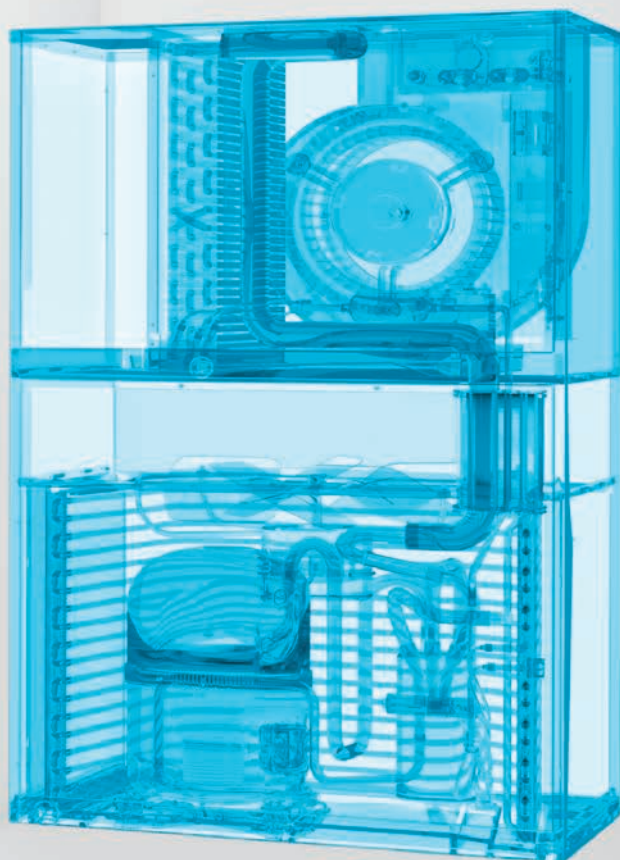

# M-SERIES™ INSTALLATION



# M-SERIES™ INSTALL GUIDE

**TIME NEEDED**  
**1.5 HR'S - 2 HR'S**

## STEP 1: BUILD SLEEVES



Attach side panels to sleeve base with screws and be sure to caulk. Then attach supply/return air divider and top panel.



Attach Rails: Screw side rails to sleeve on top and both sides. Refer to installation instructions to set the appropriate depth.



Final Sleeve

## STEP 2: INSTALL SLEEVES, SCREW TO BUILDING INSIDE & OUT, AND BOLT



Insert sleeve into wall opening



Caulk sides and top rails to building face.



Screw to building face




Also screw to side panels and base to frame



Bolt base to wooden platform

### STEP 3: SET WOOD BASE AND SCREW DOWN, ATTACH 3 GASKETS

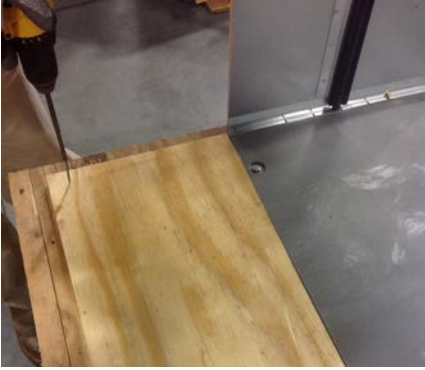

Use the supplied wood to level the unit base, attach with screws to the platform.



Peel and apply the three base pads as shown



Finished base pan and gaskets

### STEP 4: INSTALL LOUVER



Attach the foam gasket to the back side of the louver to seal off the divider plate for supply/return air



Start screws in louver to hang on key-hole slots



Pass louver through sleeve

Note: Tie rope to louver before passing through sleeve if there is no balcony to stand on.



Screw louver in place



Finished louver



## STEP 5: EXTEND FLUE PIPE



Remove screw and extend flue pipe . (MGE only)  
See Installation instructions for flue pipe length

## STEP 6: SET UNIT AND ATTACH TO SLEEVE



Set unit in place, pushing tight to gaskets

Attach strapping to wall sleeve and using existing screws, attach to unit. Be sure you cannot see daylight around gasket.

## STEP 7: WIRE & HOOK UP UTILITIES

Make utilities connections per installation manual and local building code. Attach duct work as required to pre-bent duct flanges.

